


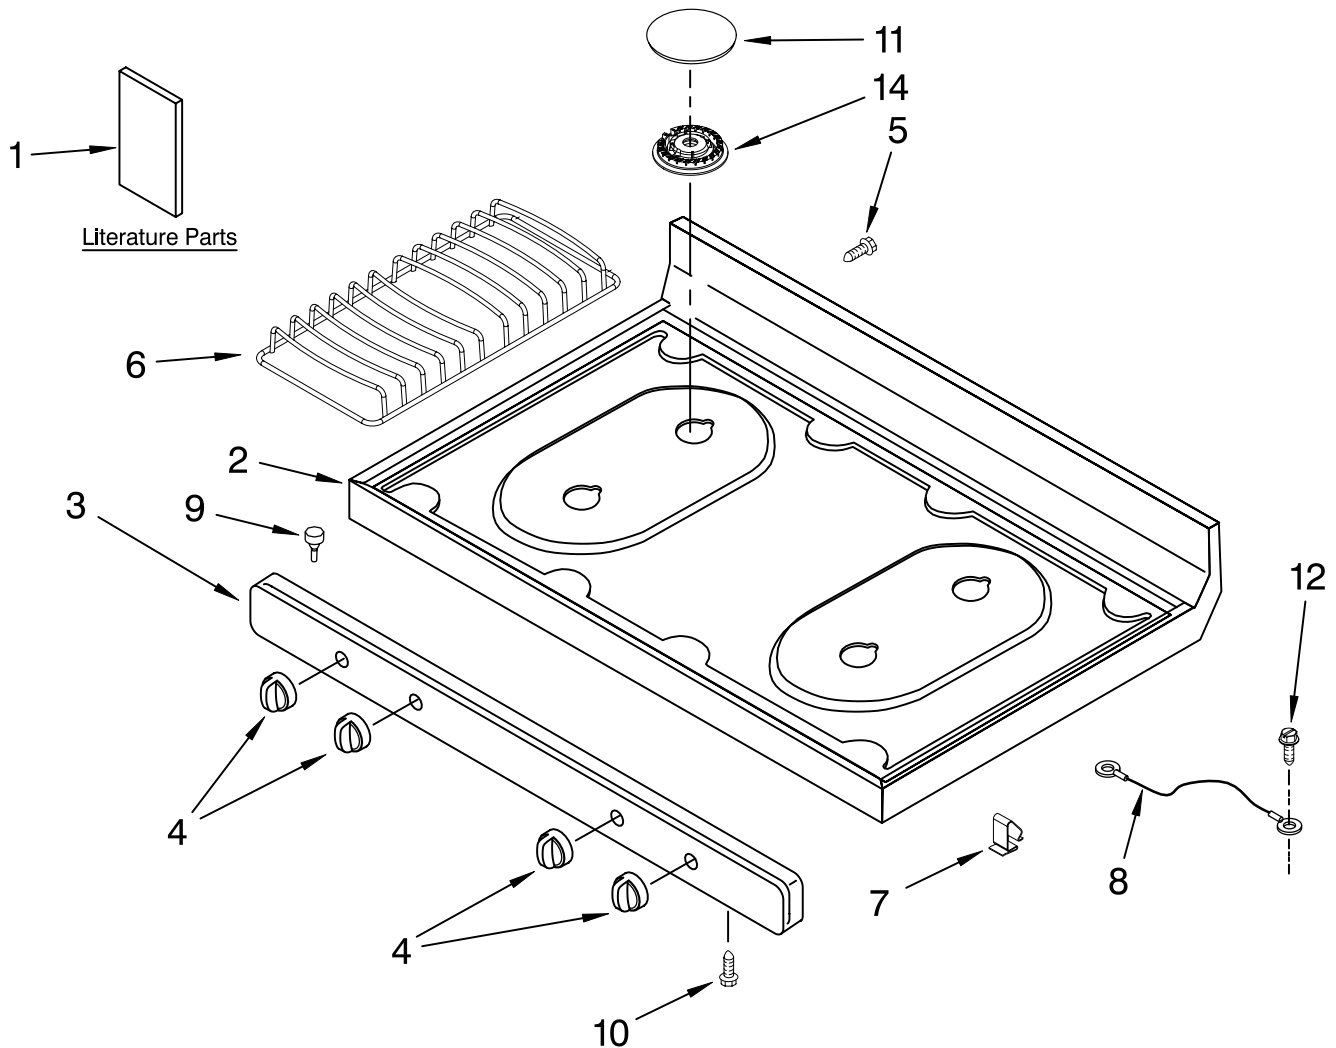

COOKTOP PARTS

For Models: SF114PXSW1, SF114PXST1, SF114PXSb1, SF114PXSQ1
(White) (Designer Biscuit) (Black) (Designer White)

30" GAS FREESTANDING
STANDARD CLEAN RANGE
ELECTRONIC IGNITION



Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
		Instruct, Install
	W10032050	English
	W10032060	Canadian
	98015589	Installation Instr (Template)
	W10099470	Guide, Use & Care
	98007130	Safer Cooking Tips
	98018086	Tech Sheet
2		Cooktop
	98017619W	White
	98017619T	Biscuit
	98017619B	Black


Illus. No.	Part No.	DESCRIPTION
3		Panel, Manifold
	W10094830	Black
	W10094860	Biscuit
	W10094850	White
4		Knob, Burner (4)
	98006100	Black
	98008208	Biscuit
	98006102	White
5	98007225	Screw
6		Grate, Burner (2)
	98017779	Black
	98017780	Grey

Illus. No.	Part No.	DESCRIPTION
7	98004722	Clip, Cooktop (2)
8	98014544	Wire, Ground
9	98013389	Bumper, Cooktop
10	98005000	Screw (3)
11		Cap, Burner
	98017461	Black
	98017465	Grey
12	8534079	Screw
14	98017537	Burner, Top (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BACKGUARD PARTS

For Models: SF114PXSU1, SF114PXST1, SF114PXSU1, SF114PXSQ1
(White) (Designer Biscuit) (Black) (Designer White)

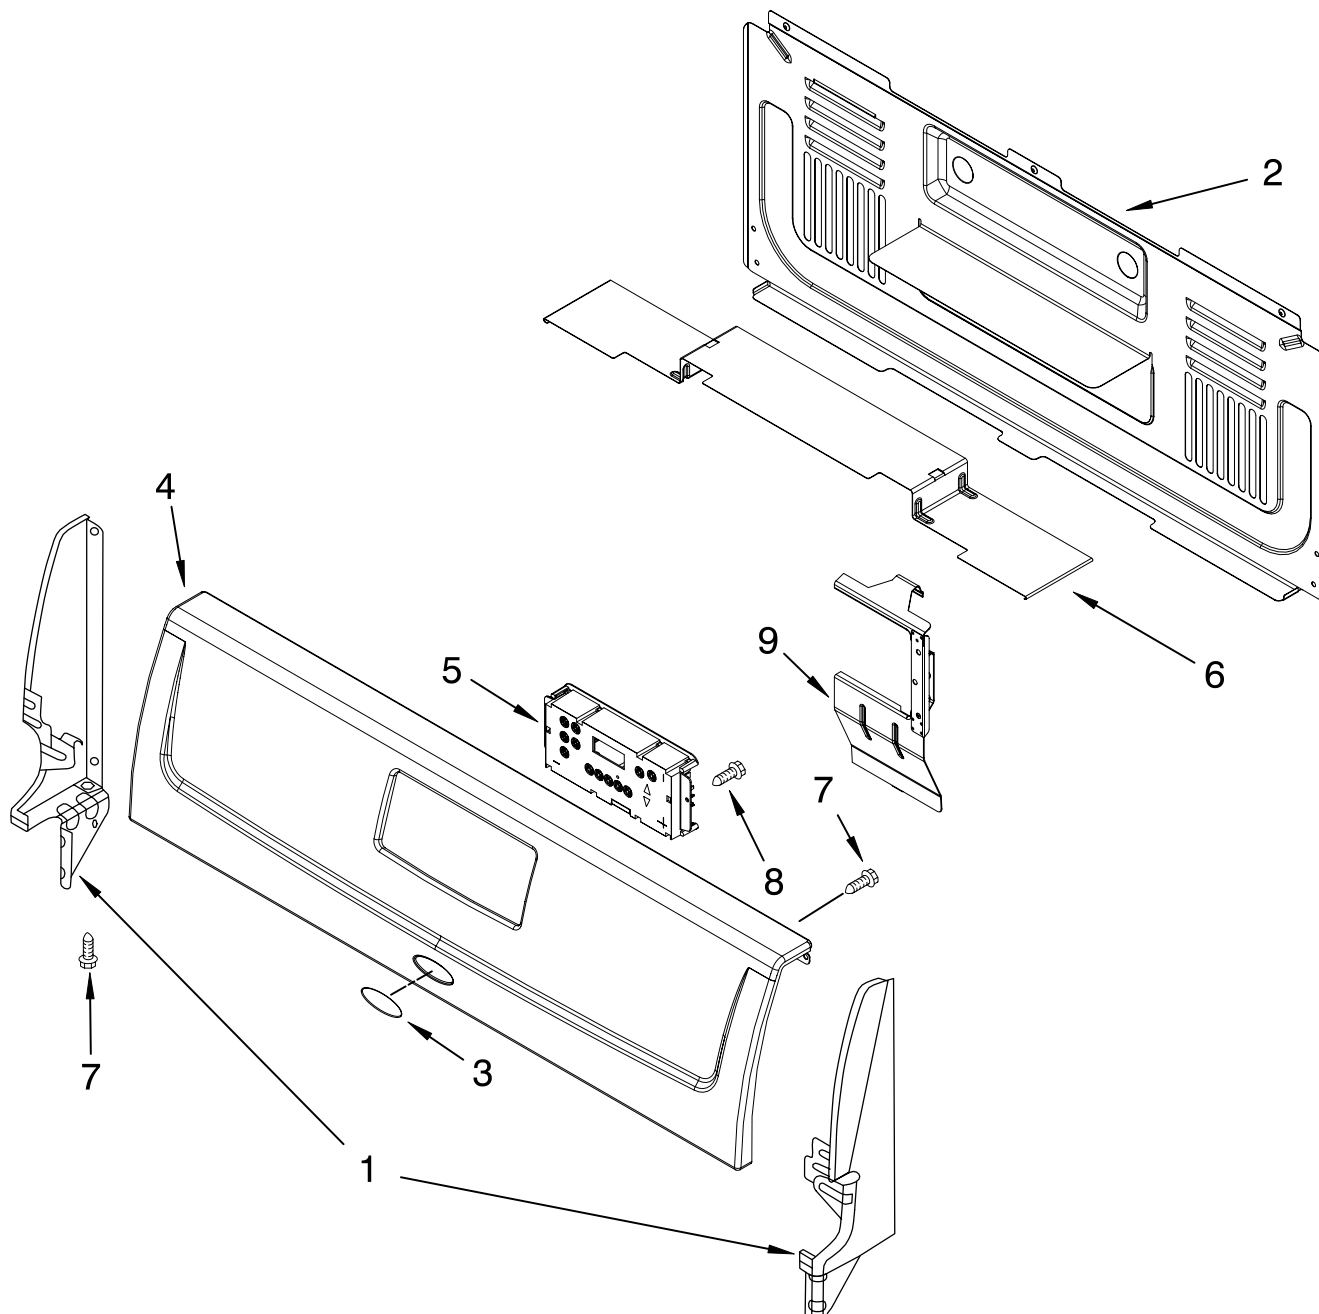

Illus. No.	Part No.	DESCRIPTION
1	98004632	Black Left
	98004633	Black Right
	98008274	Biscuit Left
	98008275	Biscuit Right
	98005336	White Left
	98005337	White Right
2	98006083	Rear, Backguard


Illus. No.	Part No.	DESCRIPTION
3	9757609	Nameplate
4	98017734B	Black
	98017734T	Biscuit
	98017734W	White
5		Control, Elec
	9762212	Black
	9762213	Biscuit
	9762211	White

Illus. No.	Part No.	DESCRIPTION
6	98018061	Deflector, Rear Cvr
7	98015526	Screw
8	98004219	Screw
9		Bracket, Timer
	98018144	Left
	98018143	Right

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MANIFOLD PARTS

For Models: SF114PXSU1, SF114PXSU1, SF114PXSU1, SF114PXSU1
(White) (Designer Biscuit) (Black) (Designer White)

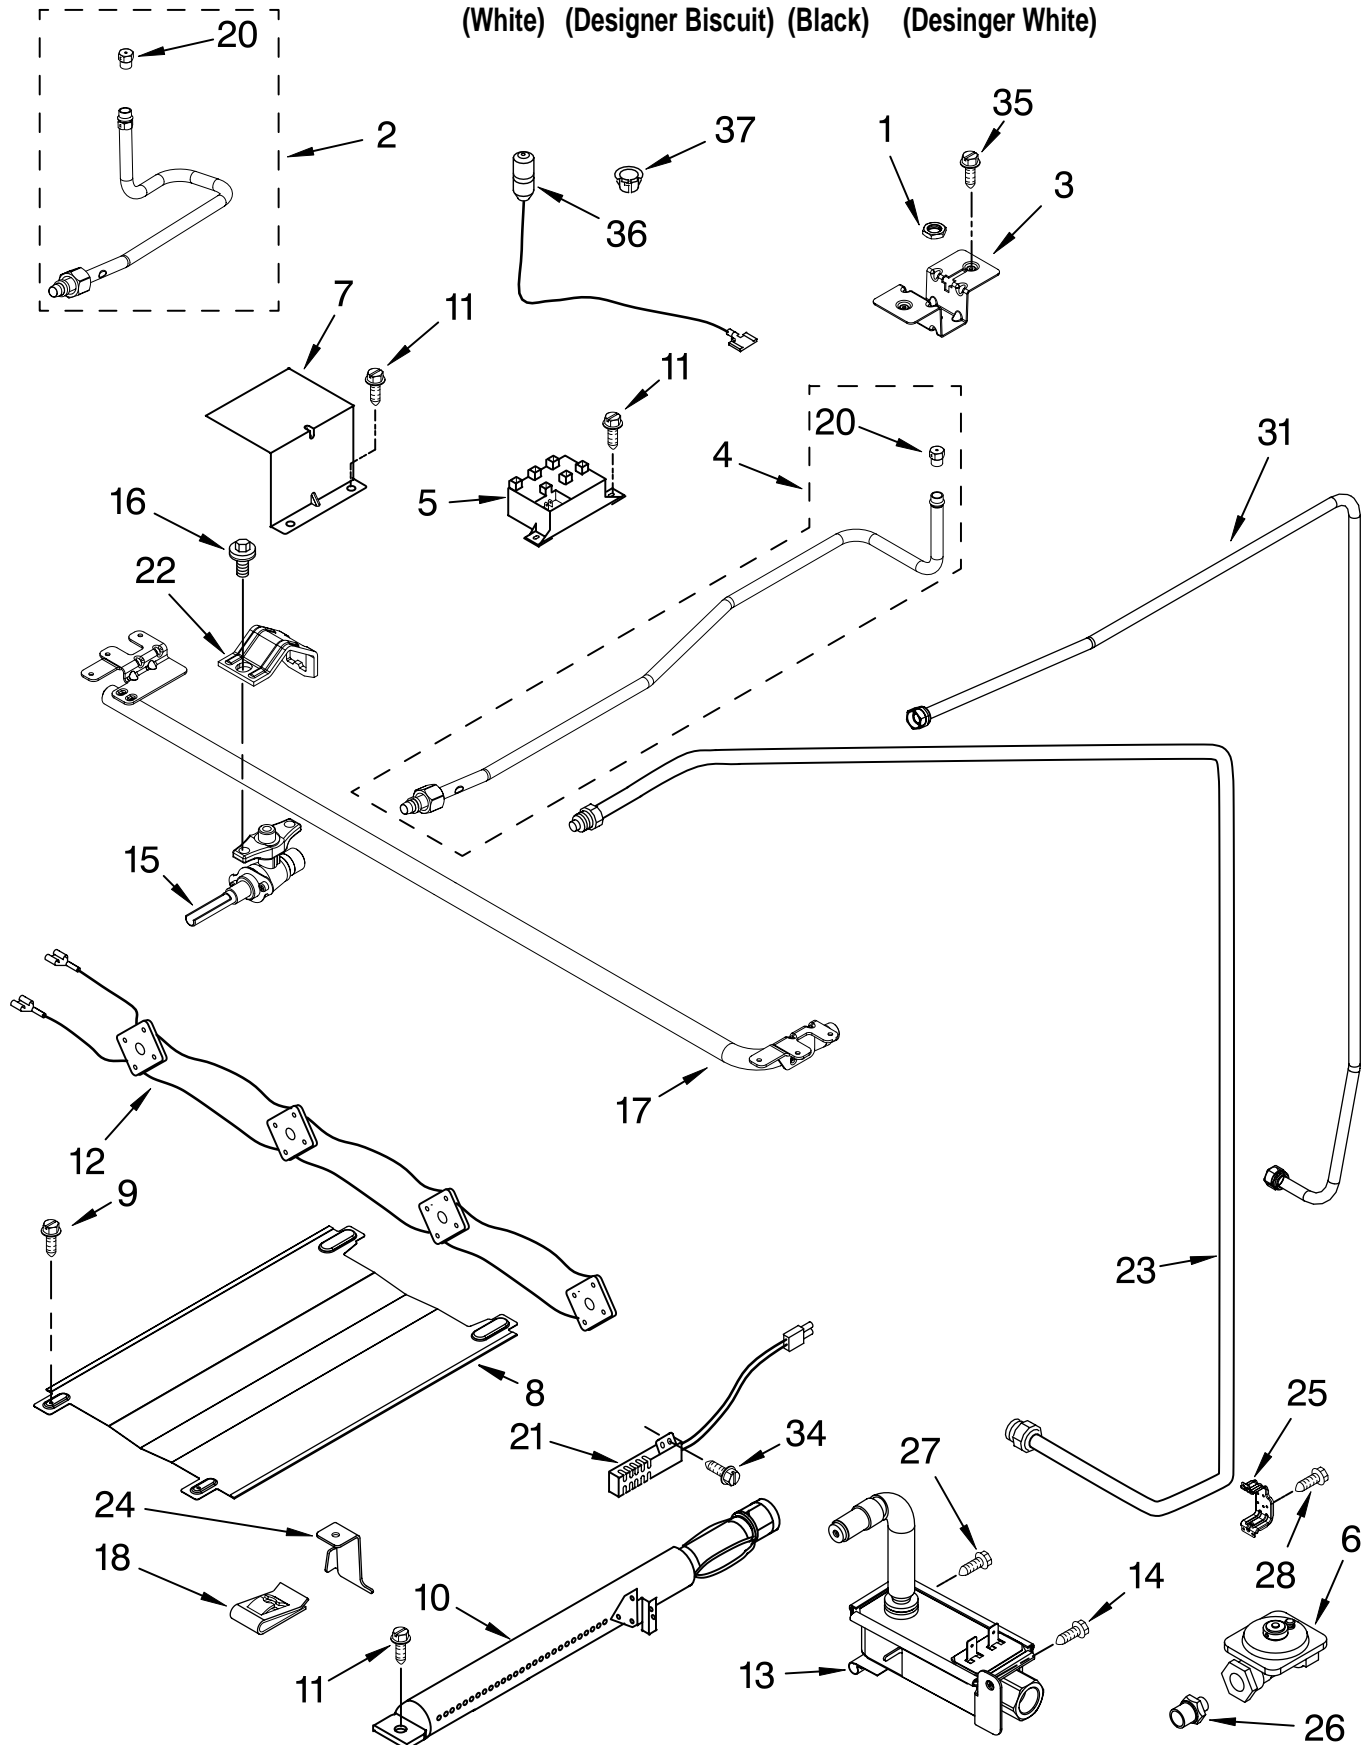

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MANIFOLD PARTS

For Models: SF114PXS_W1, SF114PXS_T1, SF114PXS_B1, SF114PXS_Q1
(White) (Designer Biscuit) (Black) (Desinger White)


Illus. No.	Part No.	DESCRIPTION
1	98017323	Nut (4)
2		Venturi, Front (2)
	98017583	LF
	98017582	RF
3	98017741	Brkt., Venturi (4)
4	98017359	Venturi, Rear (2)
5	6610341	Spark Module
6	98007411	Regulator
7	98007192	Cover, Module
8	98015099	Spreader, Flame
9	98006632	Screw
10	98012138	Burner, Oven
11	98006633	Screw
12	98017409	Harness, Switch
13	98014893	Valve, Oven
14	98006633	Screw
15	98017498	Valve, Burner (4)
16	98017517	Bolt, Valve Mtg
17	98017556	Pipe, Manifold
18	98009179	U-Nut
20		Orifice
	98017348	RF, RR, LR
	98017349	LF
21	98005652	Igniter, Oven Oven Pilot)
22	98017516	Bracket, Valve (4)
23	98007428	Tubing (Regl _r to Oven Valve)
24	98013314	Locator, Burner
25	98007410	Bracket, Regulator
26	98007431	Fitting 3/8to9/16
27	98013634	Screw
28	1180823	Screw
31	98017171	Tubing, Inlet
34	98005659	Screw
35	98004484	Screw
36		Igniter, Top
	98017561	RF & RR
	98017562	LF
	98017563	LR
37	98015032	Clip, Igniter

FOLLOWING PARTS NOT ILLUSTRATED

W10032030 LP Orifice Kit
(For Use With LP)

CHASSIS PARTS

For Models: SF114PXSU1, SF114PXSU1, SF114PXSU1, SF114PXSU1
(White) (Designer Biscuit) (Black) (Designer White)

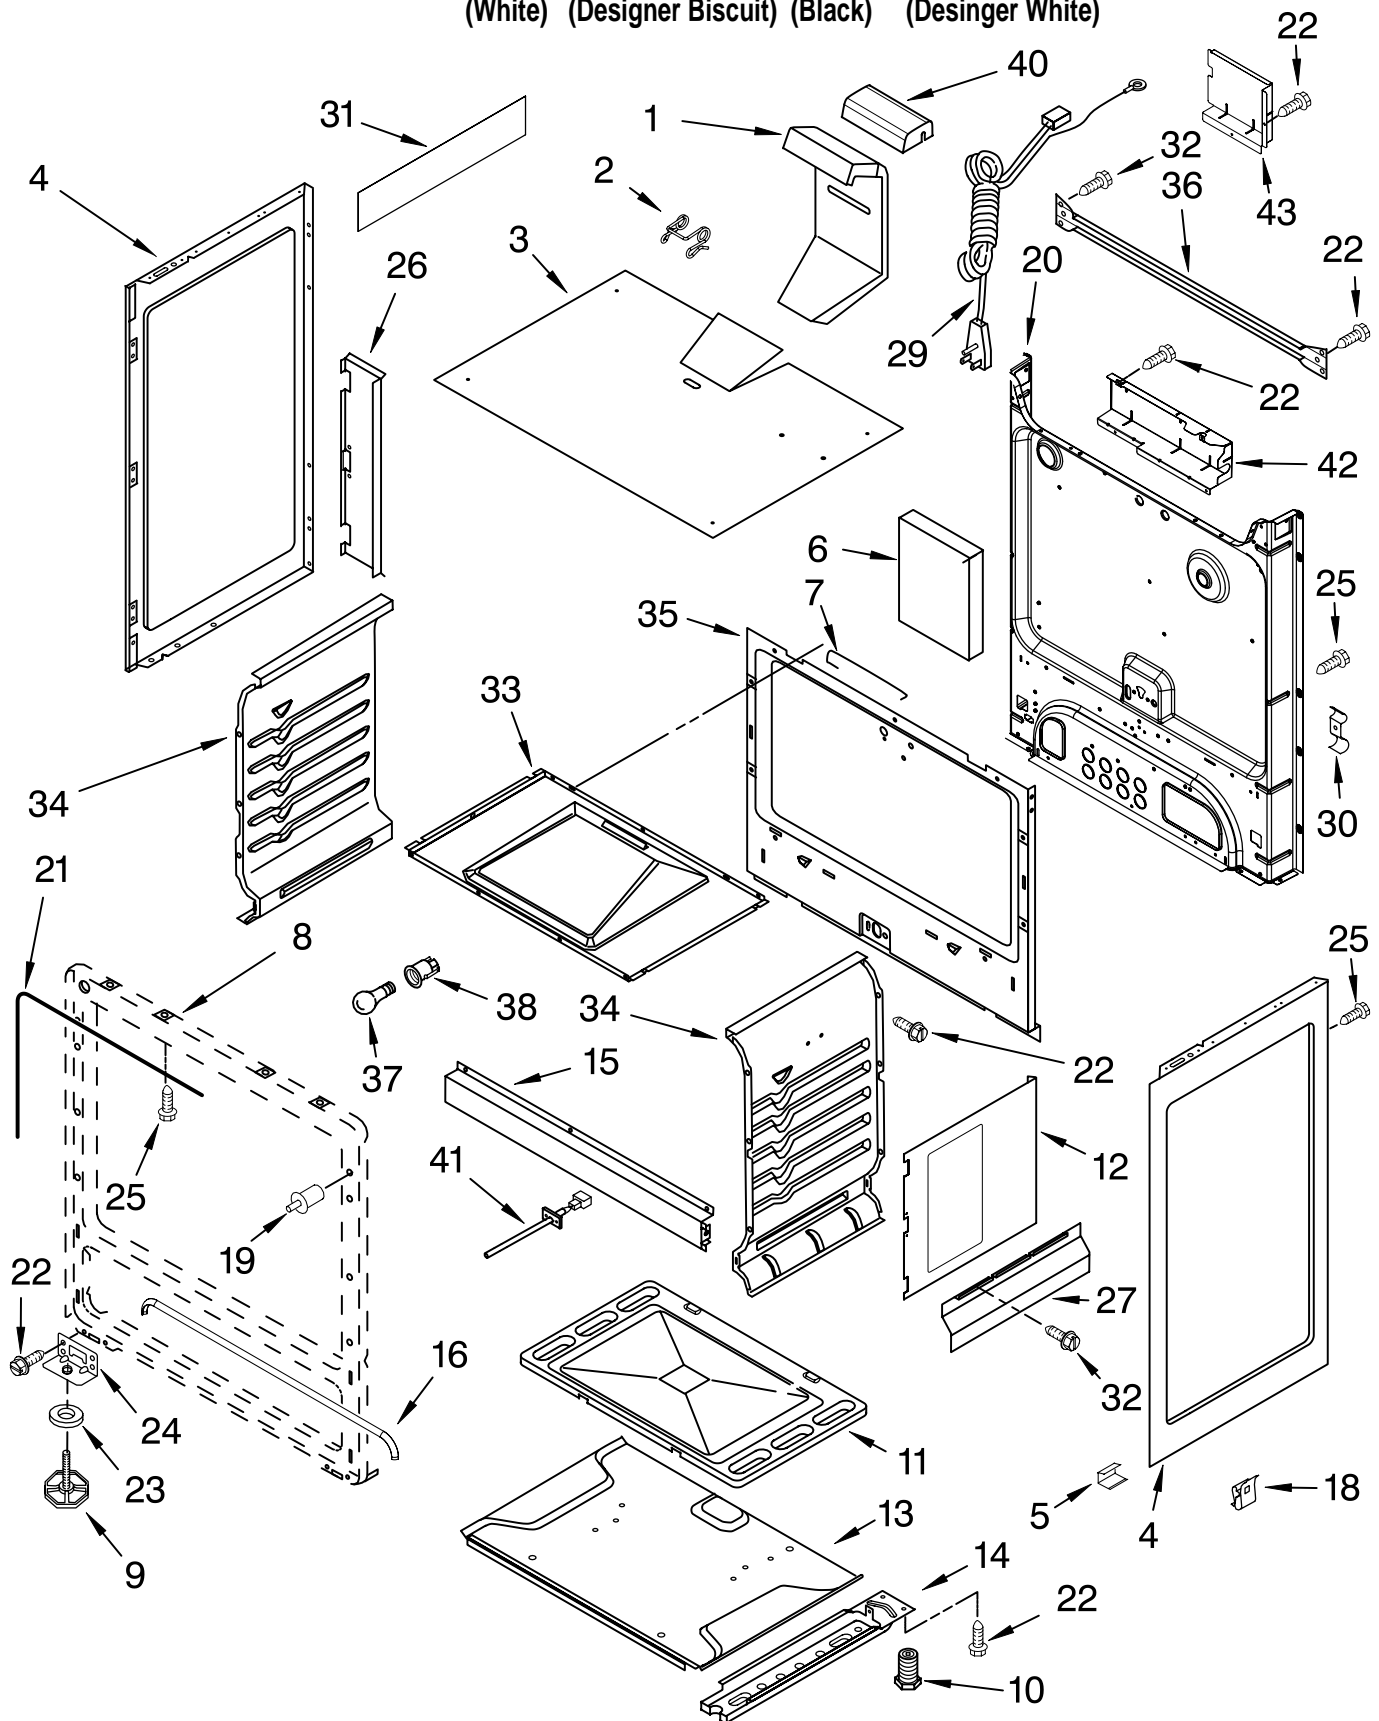

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: SF114PXSW1, SF114PXST1, SF114PXSb1, SF114PXSQ1
(White) (Designer Biscuit) (Black) (Designer White)


Illus. No.	Part No.	DESCRIPTION
1	98003799	Flue Box
2	98013690	Clip, Flue
3	98014398	Shield, Insulation
4		Panel, Side (2)
	98010042	White
	98010045	Biscuit
	98010043	Black
5	98005502	Clip, Oven Bottom
6	98006710	Counterweight
7	98006739	Wire, Brick
8	98005044	Frame, Front
9	98005306	Foot, Front (2)
10	9761935	Foot, Rear (2)
11	98004449	Bottom, Oven
12	98015683	Baffle, Side (2)
13	98003847	Baffle, Base
14	98003830	Rail, Base (2)
15	98012175	Support, Burner
16	98017162	Gasket, Broil Door
18	98009179	U-Nut
19	3196262	Switch, Door
20	98015100	Back, Main
21	98017163	Seal, Oven
22	98006633	Screw
23	98007193	Washer
24	98007126	Base, Foot
25	98006632	Screw
26	98006715	Shield, Channel
27	98007191	Shield, Lower
29	98014532	Cord, Power
30	98005026	Clip, Tubing
31	98015346	Foil, Side (2)
32	98006634	Screw
33	98004447	Top, Oven
34		Side, Oven
	98004452	Right Hand
	98004451	Left Hand
35	98013777	Back, Oven
36	98015363	Support, Rear
37	98004498	Bulb, Light
38	98004293	Socket, Light
40	98007205	Cap, Insulation
41	8273902	Sensor, Oven
42	98014105	Cover, Valve
43	98014104	Cover, Socket

INSULATION

98014360 Insulation, Wrap
98004286 Insulation, Back

OVEN & BROILER PARTS

For Models: SF114PXSU1, SF114PXSU1, SF114PXSU1, SF114PXSU1
(White) (Designer Biscuit) (Black) (Designer White)

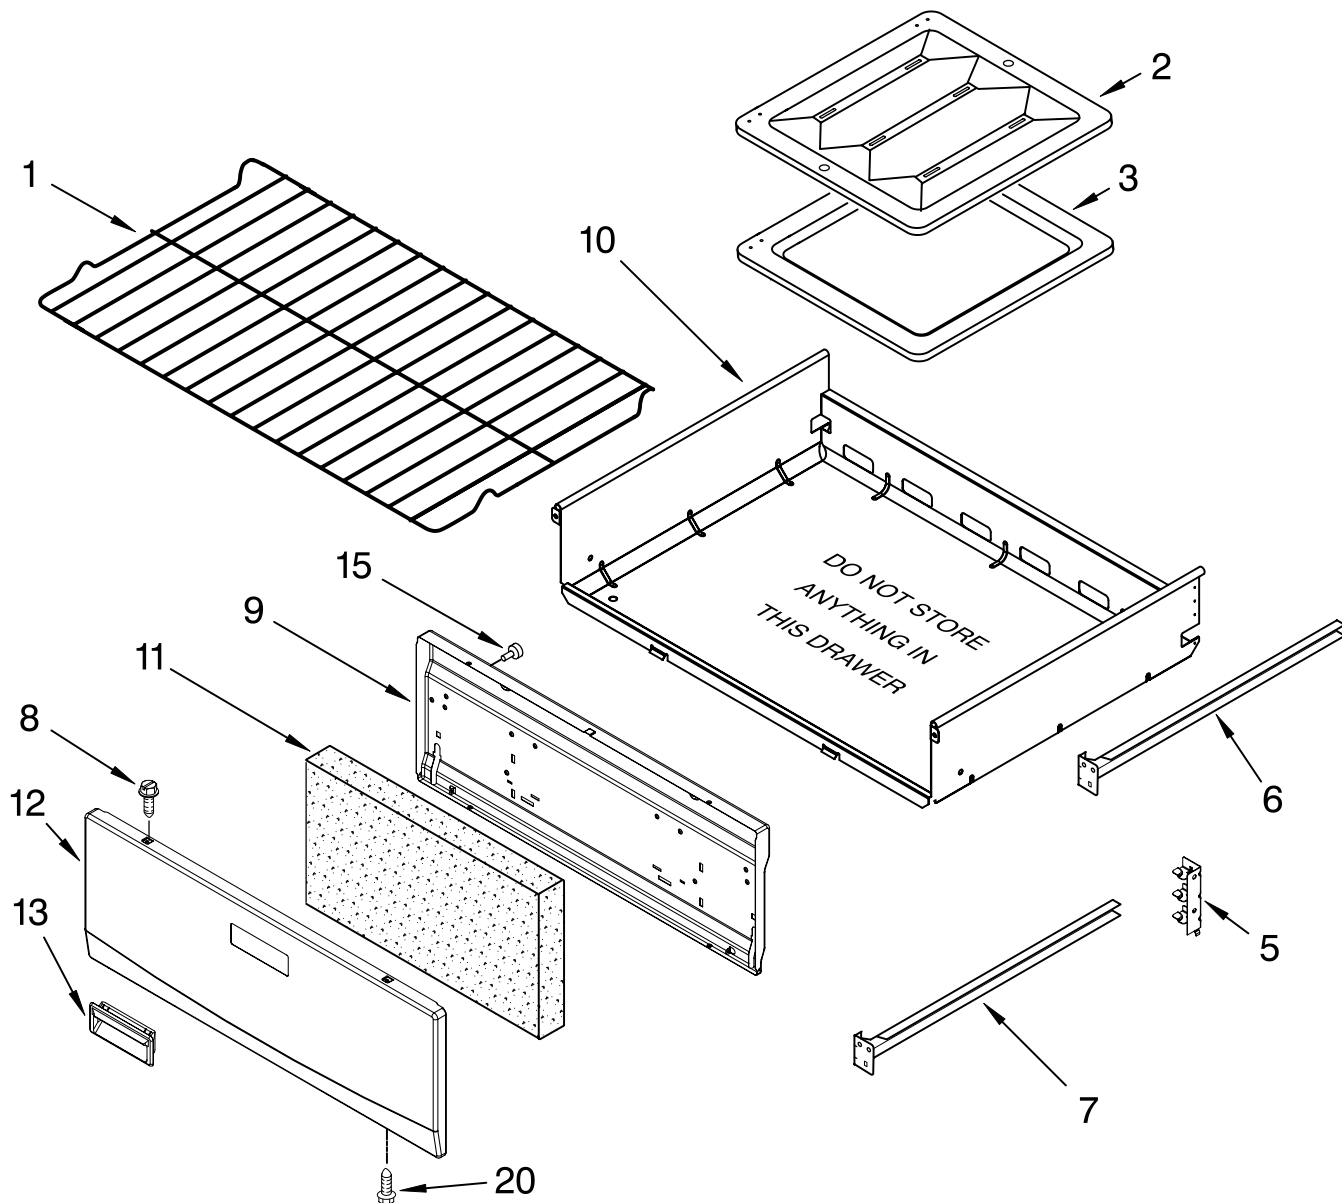

Illus. No.	Part No.	DESCRIPTION
1	98014136	Rack, Oven (2)
2	98003480	Grill, Broiler
3	98016005	Pan, Broiler
4	98016664	Support, Tray
5	98016666	Left (2)
6	98004994	Right (2)
7	98005209	Guide, Fixed(2)


Illus. No.	Part No.	DESCRIPTION
7	98004995	Guide, Mobile(2)
8	98004954	Left
9	98006727	Right
10	98006727	Screw
11	98008169	White
12	98006726	Biscuit
13	98017076	Black
14	98017784	Liner, Door
15	98017784	Storage, Drawer
16	98015234	Insulation, Door

Illus. No.	Part No.	DESCRIPTION
12	98009342	Panel, Door
13	98009341	White
14	98009343	Biscuit
15	98009343	Black
16	98008486	Handle, Brlr Door
17	98008488	White
18	98015643	Biscuit
19	98004052	Black
20	98004219	Bumper, Door(2)
21	98004219	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: SF114PXS_W1, SF114PXS_T1, SF114PXS_B1, SF114PXS_Q1
(White) (Designer Biscuit) (Black) (Desinger White)

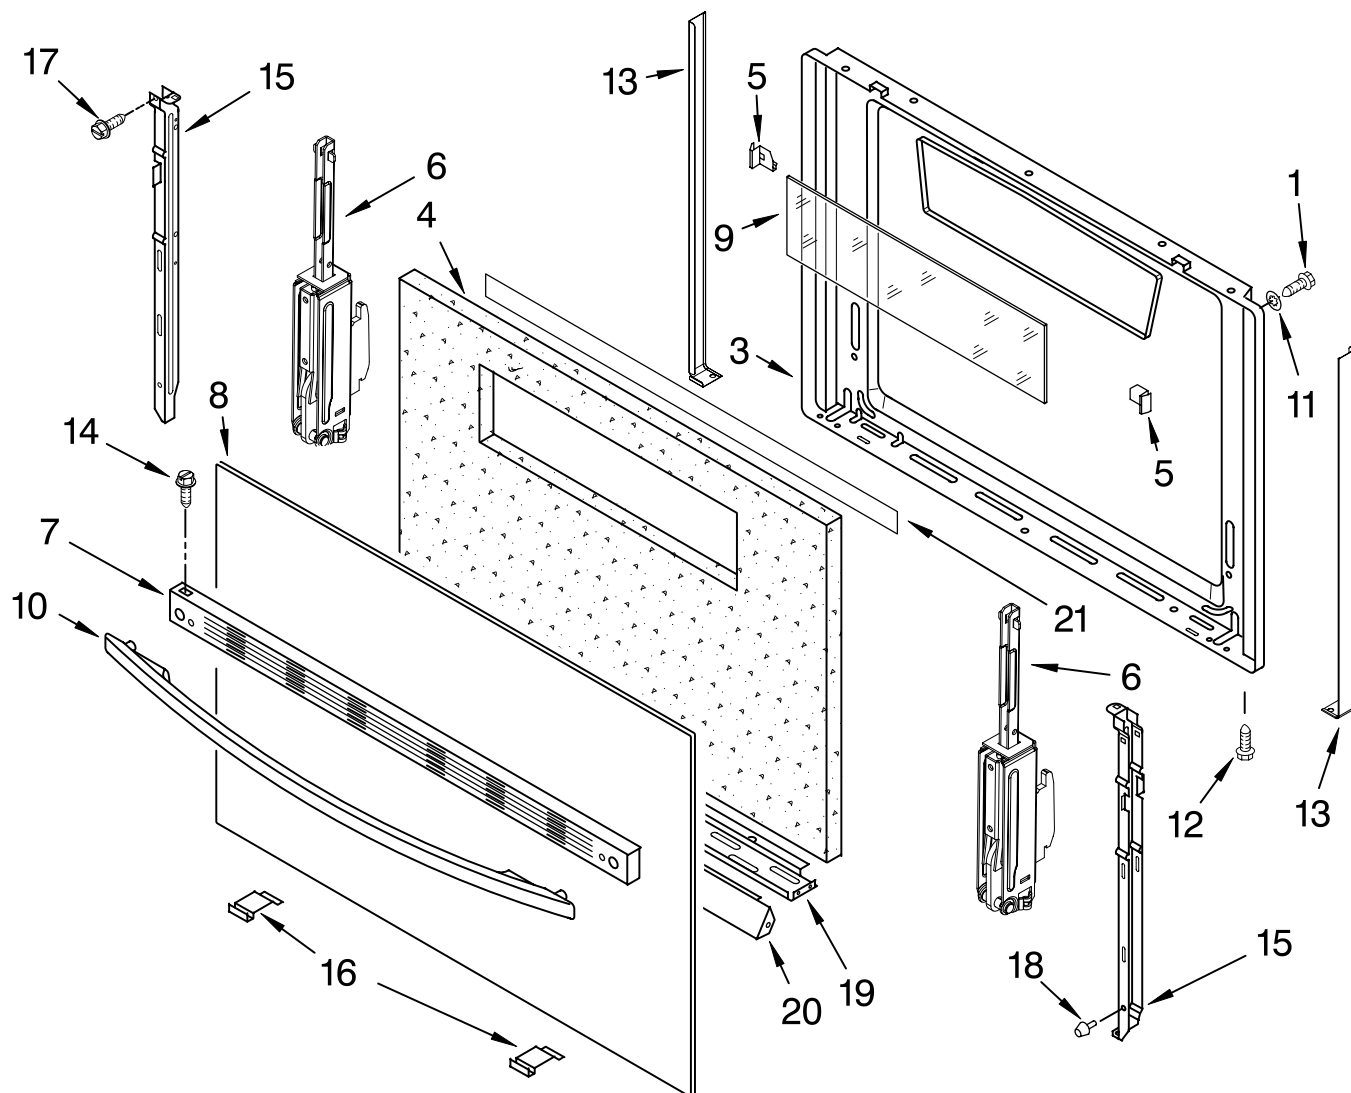

Illus. No.	Part No.	DESCRIPTION
1	8533842	Screw
3	98010182	Liner, Door
4	98006753	Insulation, Door
5		Clip, Glass
	98004952	Left
	98004953	Right
6	98017875	Hinge, Door (2)
7		Trim, Top Door
	98017767B	Black
	98017767T	Biscuit
	98017767W	White
8		Panel, Door
	98017961B	Black
	98017961T	Biscuit
	98017961W	White
9	98006801	Glass, Inner

Illus. No.	Part No.	DESCRIPTION
10		Handle, Oven Door
	98017790B	Black
	98017790T	Biscuit
	98017790W	White
11	98010557	Actuator (2)
12	98004993	Screw
13		Side Trim, Door(2)
	98016787B	Black Left
	98016795B	Black Right
	98016787T	Biscuit Left
	98016795T	Biscuit Right
	98016787W	White Left
	98016795W	White Right
14		Screw
	98008545	Black
	98008169	Biscuit
	98008544	White

Illus. No.	Part No.	DESCRIPTION
15		Retainer
	98004564	Right
	98004629	Left
16		Lower Trim, Door
	98010187	Black
	98010184	Biscuit
	98010185	White
17	98004219	Screw
18	98004227	Bumper
19	98004938	Insulation, Retainer-Top
20	98012904	Insulation, Retainer-Bottom
21	98017250	Retainer, Upper

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: SF114PXS_{W1}, SF114PXS_{T1}, SF114PXS_{B1}, SF114PXS_{Q1}
(White) (Designer Biscuit) (Black) (Desinger White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

SPLICING WIRES--25FT.

LENGTH

242828	Wire, Black	12 Ga. 150° c
8316781	Wire, Black	14 Ga. 150°c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242827	Wire, Yellow	14 Ga. 150°c

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

WIRING HARNESS PARTS

98017728	Harness, Control
98005896	Clip, Wire
3196696	Clip, Wire
3391018	Cable Tie-Push Mnt
98015022	Bushing, Snap (2)
98005894	Clamp, Cord

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit(Uncut)

ANTI-TIP KIT

98017833	Anti-Tip Kit
----------	--------------

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST